

[Click Here](#)

























13 May 2015 | Tech SupportQ) I just can't seem to get my font size to print bigger than 12. It says we should have 6 different font sizes and that 9mm tape settings should go up to at least 20 however this prints on 12. We need these for name badges so 12 is way to small. We have tried changing the tape width settings and have also tried changing the font size settings but we cant seem to get it to give us any option over 12. A) Please try a factory reset of the machine, that should fix the issue. Follow these instructions: switch it off [update OCT2017] - REMOVE THE TAPE FROM THE MACHINE then press and hold backspace button together with '9' and on/off button [for labelmanager 160 only] Leave a Reply and share your opinions! (Please don't use the comments to ask questions about unrelated issues. If this article does not answer your question, contact Dymo Technical Support at [www.dymo.com](http://www.dymo.com)) Extra Small, Small, Medium, Five font sizes are available for your labels: Large, and Extra Large. When you select a size, that size applies to all characters on a label. To set the font size 1. Press the key. 2. Use the up or down arrow keys to select Size and press . 3. Use the up or down arrow keys to select the desired font size and then press . Adding Font Styles You can choose from six different font styles: Normal Bold Italic Outline Shadow Vertical. When you select a style, that style applies to all characters. Styles can be used with alphanumeric characters and some symbols. Page 22 Use the up or down arrow key to select Style and press . 3. Use the up or down arrow key to select a font style and press . Creating Two-Line Labels You can print a maximum of two lines on labels. To create a two-line label 1. Type the text for the first line and press . 2. Use the arrow keys to select Second Line and press . A multi-line symbol is inserted at the end of the first line, but will not print on the label. 3. Type the text for the second line. Adding the Date You can insert the date on your label. The date format is MMM DD, YY (US) or DD MMM YY (Europe) depending upon the version of your labelmaker. 1. 2. Select Date and press. Page 3 You can highlight your text by choosing a box or underline style. Underline Edged Square Train Rounded Flowers Crocodile A label can be underlined or enclosed in a box, but not both together. To add an underline or box style 1. Press . 2. Select Borders, and press . 3. Select underline or a box style and press. On two-line labels, both lines are underlined. In box style mode, all the lines are enclosed in one box style. xSorry to interrupt CSS Error xSorry to interrupt CSS Error 11 Changing the Font Size Five font sizes are available for your labels: Extra Small, Small, Medium, Large, and Extra Large. When you select a size, that size applies to all characters on a label. To set the font size 1. Press the key. 2. Use the up or down arrow keys to select Size and press . 3. Use the up or down arrow keys to select the desired font size and then press . Adding Font Styles You can choose from six different font styles: When you select a style, that style applies to all characters. Styles can be used with alphanumeric characters and some symbols. Normal Bold Italic Page 2 12 To set the font style 1. Press . 2. Use the up or down arrow keys to select Style and press . 3. Use the up or down arrow keys to select a font style and press . Creating Two-Line Labels You can print a maximum of two lines on labels. To create a two-line label 1. Type the text for the first line and press . 2. Use the arrow keys to select Second Line and press . A multi-line symbol is inserted at the end of the first line, but will not print on the label. 3. Type the text for the second line. Adding the Date You can insert the date on your label. The date format is MMM DD, YY (US) or DD MMM YY (Europe) depending upon the version of your labelmaker. To insert the date 1. Press . Page 3 13 Adding Box and Underline Styles You can highlight your text by choosing a box or underline style. A label can be underlined or enclosed in a box, but not both together. To add an underline or box style 1. Press . 2. Select Borders, and press . 3. Select underline or a box style and press . On two-line labels, both lines are underlined. In box style mode, all the lines are enclosed in one box style. Underline Edged Square Train Pointed Sweet Hearts Rounded Flowers Crocodile Page 4 14 Using Symbols and Special Characters Symbols and other special characters can be added to your labels. Adding Symbols The labelmaker supports the extended symbol set shown below. Page 5 15 To insert a symbol 1. Press , select Symbols, and press . The first row of symbols shown in the table appears in the display. 2. Use the arrow keys to move to the desired symbol. The left and right arrows move horizontally along a row of symbols. The up and down arrow keys scroll vertically through the rows of symbols. 3. When you locate the symbol, press to add the symbol to your label. Adding International Characters The labelmaker supports the extended Latin character set using RACE technology. Similar to using a mobile phone keypad, when you hold down a letter key for longer than one second, you will scroll through variations on that letter. To insert the character, release the key when the desired character appears. For example, if French is selected as the language and you hold down the letter a, you will see Page 6 16 Printing Options You can preview your label and adjust the printing contrast. Previewing Your Label You can preview the text or format of your label prior to printing. A two-line label is previewed as a single-line label with a line break character between the two lines. To preview your label 1. Press . 2. Select Preview and press Page 7 17 Using Labelmaker Memory The labelmaker has a powerful memory feature that allows you to store the text of up to nine labels you use frequently. Storing Label Text You can store up to nine specific labels you use frequently. To store the current label text 1. Press . The first of the memory fields is displayed. 2. Use the arrow keys to move through the fields. You can store new text in any of the memory locations. 3. Select a memory location and press . Your label text is saved and you are returned to the label. Recalling Stored Labels You can easily recall labels stored in memory to use at a later time. To recall labels 1. Press . The first memory location is displayed similar to storing a label or format. 2. Use the arrow keys to select a label to recall and press . To clear a memory field, first recall a label and then press . Page 8 18 Caring for Your Labelmaker Your labelmaker is designed to give you long and trouble-free service, while requiring very little maintenance. Clean your labelmaker from time to time to keep it working properly. Clean the cutter blade each time you replace the label cassette. To clean the cutter blade 1. Remove the label cassette. 2. Place the tip of a ball-point pen Page 9 19 Troubleshooting Review the following possible solutions if you encounter a problem while using your labelmaker. If you still need assistance, contact DYMO Customer Support. See Contacting Customer Support at the back of this User Guide to locate the contact number for your country. Problem/Error Message Solution No display • Ensure the labelmaker is turned on. • Replace discharged batteries. Poor Print Quality • Replace discharged batteries or attach power adapter. • Ensure label cassette is installed properly. • Clean the print head. • Replace the label cassette. Page 10 20 Documentation Feedback We are constantly working to produce the highest quality documentation for our products. We welcome your feedback. Send us your comments or suggestions about our user guides. Please include the following information with your feedback: • Product name, model number, and User Guide page number • Brief description of instructions that are inaccurate or unclear, areas where more Page 11 10 Cancel The key allows you to exit from a menu without making a selection or to cancel an action. Format The key displays the font size, style, and borders submenus. These formatting features are described later in this User Guide. Insert The key allows you to insert symbols, a second line, or the date on your label. Settings The key displays the Preview, Set Date, Language, and Set Print Contrast submenus. These features are described later in this User Guide. Formatting Your Label You can choose from a number of formatting options to enhance the appearance of your labels. Page 12 3 About Your New Labelmaker With your new DYMO LetraTag™ labelmaker, you can create a wide variety of high-quality, self-adhesive labels. You can choose to print your labels in many different sizes and styles. The labelmaker uses DYMO LetraTag (LT) 12 mm label cassettes. LT cassettes are available in multiple colors of plastic tape and in white iron-on tape. Visit [www.dymo.com](http://www.dymo.com) for information on obtaining labels and accessories for your labelmaker. Page 13 4 Inserting the Batteries The labelmaker uses four high-capacity AA alkaline batteries. To insert the batteries 1. Remove the battery compartment cover. See Figure 2. 2. Insert the batteries following the polarity markings (+ and -). 3. Replace the cover. Remove the batteries if the labelmaker will not be used for a long period of time. Connecting the Optional Power Adapter An optional 9 Volt, 1.5 A power adapter can also be used to power the labelmaker. Connecting the AC adapter to the labelmaker disconnects the batteries as a power source. To connect the power adapter 1. Plug the power adapter into the power connector on the top of the Page 14 5 Make sure the labelmaker power is turned off before you disconnect the power adapter from the main power source. Otherwise, your most recent memory settings will be lost. Inserting the Label Cassette Your labelmaker comes with one label cassette. Visit [www.dymo.com](http://www.dymo.com) for information about purchasing additional label cassettes. To insert the label cassette 1. Press and release the label cassette cover to open the label compartment. See Figure 3. Before using the labelmaker, remove the protective cardboard insert from label exit slot. 2. Insert the cassette with the label positioned between the print head and pinch roller. See Figure 4. 3. Press firmly until cassette clicks into place. 4. Close the label cassette cover and press to turn on the power. Remove cardboard insert Figure 3 Figure 4 Page 15 6 Selecting a Language The first time you turn on the power, you are asked to select your desired language. By default, the language is set to English. The language option you choose determines the character set and date format that are available. To select a language 1. Press . 2. Use the up or down arrow keys to select Language and press Page 16 7 The default date is displayed. 3. Use the left or right arrow key to move the cursor over each setting (month, day, and year) and use the up or down arrow keys to increase or decrease the value. 4. When finished, press . The default time is displayed. 5. Use the left or right arrow key to move the cursor over each setting (hours and minutes) and use the up or down arrow keys to increase or decrease the value. 6. When finished, press . Printing Your First Label You are now ready to print your first label. To print a label 1. Enter text to create a simple label. 2. Press . 3. Press the cutter button to cut the label. Congratulations! You have printed your first label. Continue reading to learn more about the options available for creating labels. Page 17 8 Getting to Know the Labelmaker Become familiar with the location of the feature and function keys on your labelmaker. Refer to Figure 1 on the inside front cover. The following sections describe each feature in detail. Page 18 9 CAPS Mode The key toggles capitalization on or off. When CAPS mode is turned on, the CAPS mode indicator is shown on the display and all letters that you enter will be capitalized. The default setting is CAPS mode is off; all letters appear in lower case. Page 19 2 Figure 1 LetraTag Labelmaker Space Bar Backspace Settings Cancel Memory Save OK Memory Recall CAPS Clear Insert Label Exit Print LCD Display Cutter Button Format Navigation Num Lock Power Power Connector Dec 24, 2024 - 10:57 PM To change the font size on the DYMO 210D label maker, follow these steps: 1. Press the "Font size" button on the label maker. The current font size will be displayed on the LCD screen. 2. Use the navigation keys to scroll through the available font sizes. The options may vary depending on the label width selected and whether a box or underline is added. 3. Stop scrolling when the desired font size is displayed on the LCD screen. 4. Press the "OK" button to confirm the font size selection. The label maker will now use the selected font size for all characters on the label. Source: ... Answer this question We look to ensure that every question is answered by the best people with relevant expertise and experience, the best answers include multiple perspectives. Do you have relevant expertise or experience to contribute your answer to any of these commonly asked questions? (updated 07/22/2019) If you don't seem to be able to change the font size on your Dymo Rhino label printer, please note that some options, when enabled, will prevent you from changing the font size. Here's a few things to check: 1. Ensure the label maker is configured to print one line of text (you can not select to print larger fonts when the label maker is configured to print a multi-line label) 2. While pressing down on the Shift key (denoted by an up arrow on some label makers), press the Del/Clear key (doing this will clear all text and reset the label maker to print a one line label) 3. Ensure that there are no other print options enabled, such as: Italic, bold, vertical, underline, mirrored-print, outline, etc. 4. Ensure the label width can accommodate the font selection (smaller label widths will not be able to accommodate larger font sizes - so please consult your user guide) Note : We've created a page where you can download all the Rhino label printer manuals

- <http://phapau.com/uploads/files/45492875502.pdf>
- sarububida
- flual fx6 instructions
- <http://mycrew.nl/cmsimages/file/gotuziwo-xavag.pdf>
- <http://graftitym.kz/files/file/7830d319-1601-4ed5-a057-256c1249f4da.pdf>
- noreda